



A Configure the Wireless Settings

STOP! The Wireless Network Extender ships preset with Wireless ON. Only follow the instructions below if you want to enable wireless security or change the wireless settings for the Wireless Network Extender.

Step 1 Get the **Installation CD** from the **MegaPlug Ethernet Adapter or 4-Port Hub** package and insert it in the computer's **CD-ROM Drive**.

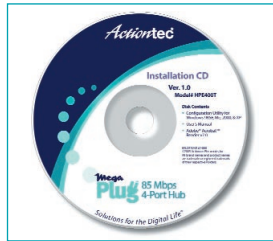


Step 2 When the “Welcome” screen appears, click **Next**.

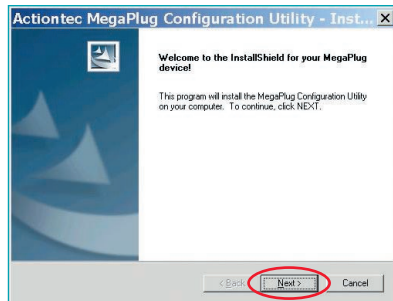


Note: If the screen above does not appear, click Start on the taskbar and then select Run. Type d:/setup (or e:/setup, depending on the drive letter of your CD-ROM drive), then click OK..

Step 3 When the “Choose Destination Location” screen appears, click **Next**.

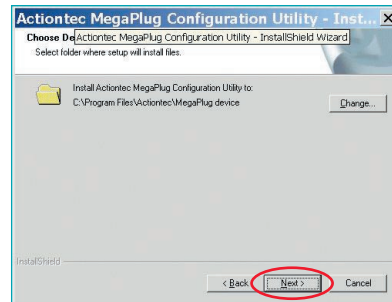


Step 4 Please wait until the final screen appears, then click **Finish**.

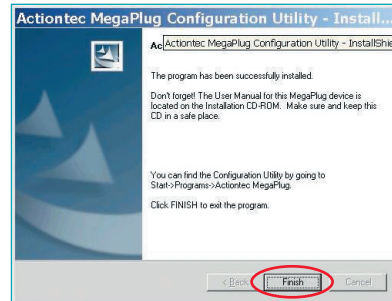

Step 5 Get the **Wireless Network Extender** from the box and turn it over. Write the **Device ID** which appears on the label in the space below.

____-____-____-____

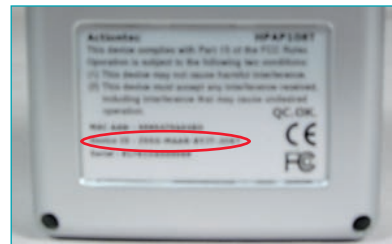


Step 6 Now plug the **Wireless Network Extender** into a power outlet.




Step 7 Make sure that you have a solid **Green Power light** and a flashing **Wireless light**.



Step 8 Please run the **MegaPlug Configuration Utility** by going to Start, Programs, Actiontec MegaPlug, MegaPlug Configuration Utility. Click on the **Advanced** Tab. Then click **Add**.

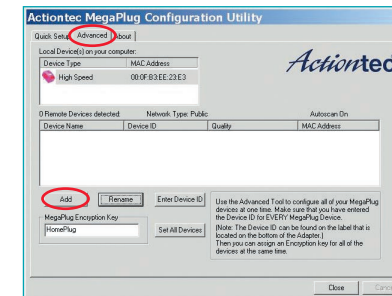

Step 9 Choose a name for your **Wireless Network Extender** and enter that name in the **Device Name** field.

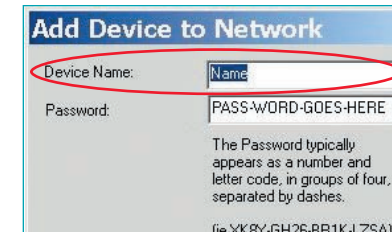

Step 10 Enter the **Device ID** from Step #5 in the **password** field. Make sure to separate each set of 4 letters with a dash. Click **OK**.




Step 11 Click **OK**, then click **Close** to exit.

Flip this Quick Start Guide over to continue


NEXT

Step 12 Get the **Configuration CD from the Wireless Network Extender box** and insert the CD into the **CD-ROM Drive**.


The “Actiontec MegaPlug Configuration Utility” screen appears. Make sure the **Wireless Network Extender** is listed under the **Device Name**. If not, click on **Locate Device** and follow the steps.

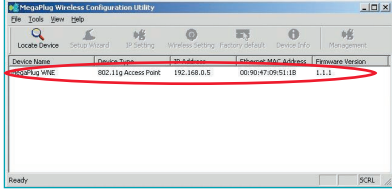


Step 13 Highlight the **MegaPlug Wireless Network Extender** and then click on the **Wireless Setting** icon.

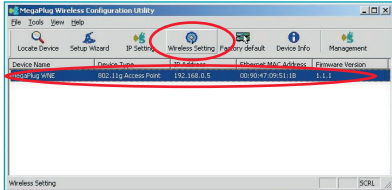


Step 14 The “Login” screen appears. Simply click the **Apply** button.

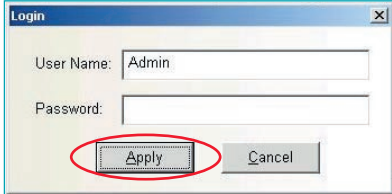

Step 15 The “Wireless Setting” screen appears. The **Wireless Network Extender** ships with the Wireless signal turned on.

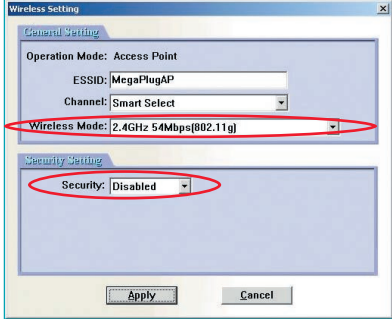

Step 16 In the ‘ESSID’ text box, enter a new name for your Wireless Extender’s network. In the ‘WEP Key 1’ text box, enter a new WEP Key for your Wireless Extender’s network (64-bit WEP requires a key composed of 10 hexadecimal digits or 5 ASCII characters. A hexadecimal digit consists of an alphanumeric character ranging from 0-9 or A-F; an ASCII character can be any character on the keyboard).

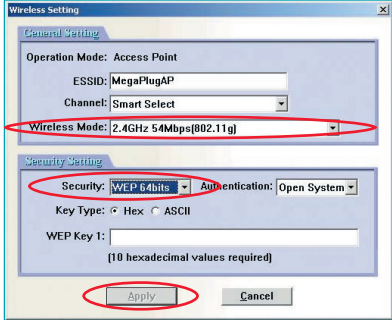

Write down the settings for your wireless network.

ESSID: _____

WEP 64-bit Key: _____

(We strongly recommend that you enable security).

Click **Apply**.

Congratulations!

You have successfully changed the settings for your MegaPlug Wireless Network Extender.



Configuring the Wireless Settings Guide